

FreeRTOS on FSIMX8MP Boards

Manual on how to use/configuring the software

Version 1.2
(2022-07-28)



**Elektronik
Systeme**

© F&S Elektronik Systeme GmbH
Untere Waldplätze 23
D-70569 Stuttgart
Germany

Phone: +49(0)711-123722-0
Fax: +49(0)711-123722-99


About This Document

This document describes how to configure the Linux kernel, the device tree and the board to use it with FreeRTOS and its demo applications provided. The software is configured for Picocoremx8mp from F&S under Linux/Buildroot.

Remark

The version number on the title page of this document is the version of the document. It is not related to the version number of any software release. The latest version of this document can always be found at <http://www.fs-net.de>.

How to Print This Document

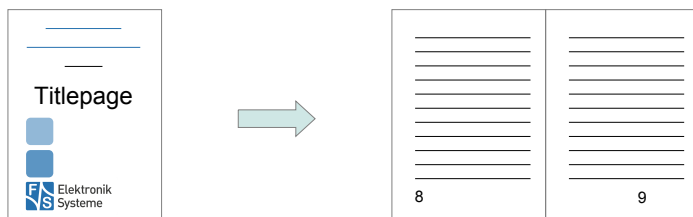

This document is designed to be printed double-sided (front and back) on A4 paper. If you want to read it with a PDF reader program, you should use a two-page layout where the title page is an extra single page. The settings are correct if the page numbers are at the outside of the pages, even pages on the left and odd pages on the right side. If it is reversed, then the title page is handled wrongly and is part of the first double-page instead of a single page.

Typographical Conventions

We use different fonts and highlighting to emphasize the context of special terms:

File names

Menu entries

```
Board input/output
```

Program code

```
PC input/output
```

Listings

```
Generic input/output
```

Variables

```
Hints and information
```


History

Date	V	Platform	A,M,R	Chapter	Description	Au
2021	1.0	All	A	-	Derivate from MX8MM-Docummentation	AD
2021	1.1	All	A, M		Add CAN examples	AD
2022	1.2	All	M, R	- 8.2.3 8.4.14	Review some chapters Removed CMSIS example sdma_transfer for UART Removed UART example hardware_flow_control	TK TK TK

V Version
A,M,R Added, Modified, Removed
Au Author



Table of Contents

1	Pin Assignment	1
1.1	PicoCoreMX8MP	1
1.1.1	GPIOs	1
1.1.2	ECSPI.....	1
1.1.3	I2C	1
1.1.4	PWM.....	1
1.1.5	UART_B	1
1.1.6	CAN.....	2
2	Introduction	3
3	Installation	4
3.1	Installation of the GCC embedded toolchain	4
3.2	Download Source Code.....	4
3.3	Release Content.....	5
3.4	Unpacking the Source Code.....	8
4	Getting started	9
4.1	Configure your host computer	9
4.2	Get the tools and packages.....	9
4.3	Install Content.....	9
4.4	Installation of the GCC embedded toolchain	9
4.5	Patches.....	10
4.5.1	Additional binaries	10
4.6	Description of the FreeRTOS directory structure	11
5	Configuration for Cortex-M7 usage	13
5.1	Changes regarding official U-Boot.....	13
5.2	Using bootaux.....	13
6	Building the examples	14
6.1	Adjusting the right UART Console.....	14
6.2	Prepare.sh.....	16
6.3	Make.....	17
7	Adding custom boards	18

8	FreeRTOS examples	19
8.1	General build and run information	19
8.2	Cmsis_driver_examples	20
8.2.1	ecspi	20
	Int_loopback_transfer	20
	sdma_loopback_transfer	22
8.2.2	i2c	24
	int_b2b_transfer / Master	24
	int_b2b_transfer / Slave	26
8.2.3	uart	28
	cmsis_iuart_interrupt_transfer	28
	cmsis_iuart_sdma_transfer	28
8.3	demo_apps	30
8.3.1	hello_world	30
8.3.2	sai_low_power_audio	31
8.4	driver_examples	32
8.4.1	ecspi	32
	ecspi_loopback	32
	interrupt_b2b_transfer / Master	33
	interrupt_b2b_transfer / Slave	35
	polling_b2b_transfer / Master	37
	polling_b2b_transfer / Slave	39
8.4.2	canfd	41
	interrupt_transfer	41
	loopback	43
	loopback_transfer	45
	ping_pong_buffer_transfer	46
8.4.3	flexcan	48
	interrupt_transfer	48
	loopback	51
	loopback_transfer	53
	ping_pong_buffer_transfer	54
8.4.4	gpio	57



led_output.....	57
8.4.5 gpt.....	58
gpt capture	58
gpt_timer	58
8.4.6 i2c.....	60
interrupt_b2b_transfer / Master	60
interrupt_b2b_transfer / Slave	62
polling_b2b_transfer / Master.....	64
polling_b2b_transfer / Slave.....	66
8.4.7 pdm.....	68
8.4.8 pwm.....	68
8.4.9 rdc.....	69
8.4.10 sai.....	70
interrupt_transfer	70
sdma_transfer	70
8.4.11 sdma.....	71
memory_to_memory	71
scatter_gather	72
8.4.12 sema4.....	73
8.4.13 tmu.....	74
tmu_2_monitor_threshold.....	74
tmu_2_temperature_polling.....	75
8.4.14 uart	76
auto_baudrate_detect	76
idle_detect_sdma_transfer	77
hardware_flow_control	78
interrupt	78
interrupt_rb_transfer.....	79
interrupt_transfer	80
polling	81
sdma_transfer	82
8.4.15 wdog.....	83
8.5 multicores_examples.....	84

8.5.1	rpmsg_lite_pingpong_rtos_linux_remote.....	84
8.5.2	rpmsg_lite_str_echo_rtos	86
8.6	rtos_examples	88
8.6.1	freertos_ecspi.....	88
8.6.2	freertos_event.....	89
8.6.3	freertos_generic.....	91
8.6.4	freertos_hello.....	93
8.6.5	freertos_i2c.....	94
8.6.6	freertos_mutex.....	96
8.6.7	freertos_queue	97
8.6.8	freertos_sem.....	98
8.6.9	freertos_swtimer	100
8.6.10	freertos_tickless.....	101
8.6.11	freertos_uart	102
9	Appendix	103
	List of Figures	103
	List of Tables	103
	Third Party Agreement from Real Time Engineers Ltd.	103
	Important Notice	104



1 Pin Assignment

In the following subchapters you can find an overview which pins are used for each Board. The examples itself also contain the necessary pins.

1.1 PicoCoreMX8MP

1.1.1 GPIOs

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
SPI_B_MOSI / LED	J1_60	J11_6

1.1.2 ECSPi

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

1.1.3 I2C

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

1.1.4 PWM

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
PWM	J2_63	J11_34

1.1.5 UART_B

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
----------	--------------------	---------------

Pin Assignment

UART_B_TXD	J1_28	J10_5
UART_B_RXD	J1_26	J10_3
UART_B_CTS	J1_24	J10_6
UART_B_RTS	J1_22	J10_4

1.1.6 CAN

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3



2 Introduction

The F&S FreeRTOS_BSP-package is based on the MCUXpresso Software Development Kit (SDK) by NXP. It provides comprehensive software support for Kinetis and LPC Microcontrollers.

The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains FreeRTOS and various other middleware to support rapid development.



3 Installation

This section describes the installation of the CST code-signing client files.

3.1 Installation of the GCC embedded toolchain

The examples are tested and can be built with the GCC embedded toolchain (gcc-arm-none-eabi-9-2020-q2-update-x86_64-linux), which can be found under developer.arm.com.

If the toolchain is not installed, you have to download the file and extract the content to your filesystem:

```
tar -xvjf gcc-arm-none-eabi- $\{version\}$ .tar.bz2
```

where $\{version\}$ will be replaced by the corresponding version you've downloaded.

It is necessary to export the `ARMGCC_DIR` environment variable, if it's not already exported:

```
export ARMGCC_DIR=/usr/local/arm/gcc-arm-none-eabi- $\{version\}$ 
```

For a more convenient way you can add this to the rc file of your favorite shell (e.g. zshrc, bashrc, etc.)

3.2 Download Source Code

To download FreeRTOS source code, go to the F&S main website

<http://www.fs-net.de>

First you have to register with the website. Click on *Login* right at the top of the window and on the text "I am not registered, yet. Register now" (Figure 1).

Log in

That page is secured. Enter your credentials below and we will send you right along.

Username

Password

Remember me next time?

Log in

[I've lost my password](#)

[I am not registered, yet. Register now.](#)



Figure 1: Register with F&S website

In the screen appearing now, fill in all fields and then click on *Register*. You are now registered and can use the personal features of the website, for example the Support Forum and downloading software.

After logging in, you are at your personal page, called “My F&S”. You can always reach this place by selecting *Support* → *My F&S* from the top menu. Here you can find all software downloads that are available for you. In the top sections there are private downloads for you or your company (may be empty) and in the bottom section you will find generic downloads for all registered customers.

My F&S

 Forum

 Edit my profile
 Logout

Unlock downloads

To unlock the download section for a board please insert a serial number into the form below. You will then be able to download the software for the specific board.

[Where can I find the serial number?](#)

Figure 2: Unlock software with serial number

To get access to the software of a specific board, you have to enter the serial number of one of these boards (see *Figure 2*). Click on “Where can I find the serial number” to get pictures of examples where to find this number on your product. Enter the number in the white field and press *Submit serial number*. This enables the software section for this board type for you. You will find Linux, Windows CE, and all other software and tools available for this platform like DCUTerm or NetDCUUsbLoader.

First click on the type of your board, e.g. Picocoremx8mp, then on Linux. Now click on FreeRTOS. This will bring up a list of all our FreeRTOS releases. Old releases up to 2019 had <x>.<y> as version identifier, new releases use V<year>.<month>. We will abbreviate this as <v> from now on. Select the newest version, for example *freertos-sdk-2.10-fsimx8mp-V2021.07*. This will finally show two archives that can be downloaded.

When you look at our Linux releases, you will find a list of all our releases and a README text. There are usually two files related to a release.

`freertos-sdk-2.10-fsimx8mp-V<v>.tar.bz2` This is the main release itself containing all sources, the binary images, the documentation and the toolchain.

3.3 Release Content

These tar archives are compressed with bzip2. To see the files, you first have to unpack the archives

```
tar -xvf freertos-sdk-2.10-<arch>-<v>.tar.bz2
```



Installation

This will create a directory `<arch>-<v>` that contains all the files of the release. They often use a common naming scheme:

```
<package>-<platform>-<v>.<extension>
```

With the following meaning:

<code><package></code>	The name of the package (e.g. <code>freertos-sdk</code>). If it is a source package, we also add the version number of the original package that our release is based on, for example <code>freertos-sdk-2.10</code>
<code><platform></code>	The name of a board, if the package is only valid on one board (e.g. <code>Picocoremx8mp</code>); or the name of an architecture, if the package is valid on different boards of the same architecture (e.g. <code>fsimx8mp</code>), or the string <code>f+s</code> or <code>fus</code> if the package is architecture independent.
<code><v></code>	Release version, consisting of a letter <code>v</code> for version and the year and month of the release (e.g. <code>V2021.07</code>).
<code><extension></code>	The extension of the package (e.g. <code>.bin</code> , <code>.tar.bz2</code> , etc.).



The following table lists the files that you get after unpacking the release archive. To avoid having a too excessive list, we use the wildcard * in some entries to refer to a whole group of similar file names that only differ in the name of the board or module.

The provided NBoot version 2021.07 or higher must be installed. It contains needed changes for the Cortex-M7.

Directory/File	Description
/	Top directory
Readme-freertos-f+s.txt	Release information (FreeRTOS)
setup-freertos	Script to unpack FreeRTOS source packages to a build directory
binaries/	Images to be used with the board directly
*.bin	Precompiled examples for Picocoremx8mp
sources/	Source packages
freertos-sdk-2.10-fsimx8mp-V2021.07.tar.bz2	FreeRTOS source
toolchain/	Cross-compilation toolchain
gcc-arm-none-eabi-9-2020-q2-update-x86_64-linux.tar.bz2	ARM toolchain to use with <arch>
doc/	Documentation
FreeRTOS_on_Fsimx8mp_Boards_eng.pdf	Manual on how to use/configuring the software
patches/	Patches for Linux
0001-Improve-support-for-FreeRTOS-on-fsimx8mp-boards.patch	Patch for Linux

Table 1: Content of the created release directory



3.4 Unpacking the Source Code

The source code packages are located in the `sources` subdirectory of the release archive. We will assume that you want to create a separate build directory where you extract the source code and build all the software.

We have prepared a shell script called `setup-freertos` that does this installation automatically. Just call it when you are in the top directory of the release and give the name of the build directory as argument.

```
cd <release-dir>
./setup-freertos <build-dir>
```

Add option `--dry-run` if you want to check first what this command will do. Then only a list of actions will be output but no actual changes will take place. For further information simply call

```
./setup-freertos --help
```

If you prefer to do the installation by hand, well, the script more or less executes the following commands, just with some more checks and directory switching.

```
mkdir <build-dir>
tar xf freertos-sdk-2.10-fsimx8mp-<v>.tar.bz2
```



4 Getting started

4.1 Configure your host computer

In order to configure your computer properly (in order to use F&S software) please refer to the “AdvicesForLinuxOnPC” guide provided by F&S Elektronik Systeme. After you have done this, continue with this guide.

4.2 Get the tools and packages

Get the F&S FreeRTOS_BSP-package from the F&S website under

```
my F&S /picocoremx8mp/Linux/ FreeRTOS/freertos-sdk-2.10-fsimx8mp-
V<YEAR>.<MONTH>.tar.bz2
```

4.3 Install Content

We have prepared a shell script called `setup-freertos.sh` that does this installation automatically. Just call it when you are in the top directory of the release and give the name of the build directory as argument.

```
cd <release-dir>
./setup-freertos
```

Add option `--dry-run` if you want to check first what this command will do. Then only a list of actions will be output but no actual changes will take place. For further information simply call

```
./setup-freertos --help
```

If you prefer to do the installation by hand, well, the script more or less executes the following commands, just with some more checks and directory switching.

```
mkdir <build-dir>
tar xf freertos-sdk-2.10-fsimx8mp-V<year>.<month>.tar.bz2
```

Please install the provided NBoot located in `binaries/nboot-fsimx8mp-<v>.fs`

4.4 Installation of the GCC embedded toolchain

The examples can be built with the GCC embedded toolchain (`gcc-arm-none-eabi-9-2020-q2`), which can be found under developer.arm.com or the toolchain directory of the release archive.



Getting started

Extract the content to your filesystem:

```
tar -xvjf gcc-arm-none-eabi-${version}.tar.bz2
```

where `${version}` will be replaced by the corresponding version you've downloaded.

It is necessary to export the `ARMGCC_DIR` environment variable:

```
export ARMGCC_DIR=/usr/local/arm/gcc-arm-none-eabi-${version}
```

For a more convenient way you can add this command to the rc file of your favorite shell (e.g. `zshrc`, `bashrc`, etc.)

4.5 Patches

This release provides a necessary patch for the Linux kernel. This change is crucial. The patch is independent from the release type, it must be applied for `fsimx8mp-Y2021.04` and for `fsimx8mp-B2021.06`. For newer `fsimx8mp` releases the patch is not necessary anymore. Please make sure to install it according to the used one.

4.5.1 Additional binaries

Besides the binaries of the respective FreeRTOS example in the `binaries/` directory, the required NBoot version 2021.07 or higher can be found here. It contains additional fixes for the Cortex-M7. This version must be installed, otherwise certain examples will not work correctly. For further information on how to install/update the NBoot, please refer to the document

“LinuxOnFSBoards”.



4.6 Description of the FreeRTOS directory structure

The following table describes the directory structure of the FreeRTOS BSP

/	Top Directory
bin	After you have run the make command the output binaries or images can be found here in their specific \$boardname-directory.
build	After you have run the make command, this directory contains the .bin, .elf, .hex, .map and object files for each example.
CMakeFiles	Contains CMake-specific files. Normally you don't have to change anything in here.
CMSIS	Contains the Cortex Microcontroller Software Interface Standard (CMSIS) library.
devices	Contains socket specific files and drivers.
doc	Contains the original documentation by NXP.
examples/	Contains the SoC and board specific Cortex-M7 examples. The first level distinguishes between the different SoC-architectures. At the second level you will find the SoC specific examples. For the MX8MP-examples the board specific examples are located directly in the directory of each example. The examples are structured as follows:
cmsis_driver_examples	Contains examples that shows the usage of the Cortex Microcontroller Software Interface Standard (CMSIS)
demo_apps	Here you can find the applications which highlight certain key features of the ARM Cortex-M7 Core combined with FreeRTOS and bare metal.
driver_examples	You can find simple applications here which are intended to show peripheral drivers working in the bare metal environment. Because some of the examples use special onboard sensors, they did not get ported.
multicore_examples	Here you can find examples, which demonstrate the multicore communication via RPSmsg.
rtos_examples	These examples show the usage of different FreeRTOS-specific functions.
not_tested	Contains examples that have not been tested yet. This can have different reasons like missing sensors or hardware on the EVK. Some of them will be ported in the future. If you are interested in porting one of these examples please contact F&S Electronic

Getting started

	Systeme. For further information refer to the porting_readme.txt located at not_tested/<soc>/.
rtos	Contains the operating system freertos.
tools	Contains different tools needed for the building process.

Table 2: Description of the directory structure



5 Configuration for Cortex-M7 usage

5.1 Changes regarding official U-Boot

F&S provides you with a modified U-Boot which can make use of the Cortex-M7 via the *bootaux* command. Since our U-Boot is heavily modified compared to the official release from NXP, it's not advisable to use any other than the one provided by F&S.

F&S added some environment variables to simplify the auxiliary core handling:

Run

```
setenv m7_file <example_name>
```

to set the name of the example you want to load.

Run

```
run m7
```

5.2 Using bootaux

Simple start

Using the auxiliary core can be achieved by using the following command line inside of the U-Boot environment:

```
tftp ${m7_file}; cp.b $loadaddr 0x007E0000 $filesize; bootaux  
0x007E0000
```

This will load an image defined by *M7_file* via tftp to your board, move it to the TCM and start the auxiliary core.

6 Building the examples

To simplify the process of building, configuring the examples and cleaning up we provide you with a set of bash scripts located in the root directory of the FreeRTOS BSP:

6.1 Adjusting the right UART Console

If the PicoCoreBBDSI REV \geq 1.20 is used, this step can be ignored.

Users that use the PicoCoreBBDSI REV1.10 baseboard need to make a few changes in every example they may run since there are major differences in the Output of those ports between revision 1.10 and 1.20. since the examples are ported to run on revision 1.20.

The changes are basically the same in every example, except for those that show UART functionality. UART examples have to be modified further by changing the '4' in every mention of UART into '3'. For all other examples it is just a few lines that need minor changes that are necessary to get an output on the Debug Console.

The following list shows all the changes necessary for **all examples**:

board.c

```
CLOCK_EnableClock(kCLOCK_Uart4);
```

Needs to be changed to:

```
CLOCK_EnableClock(kCLOCK_Uart3);
```

board.h

```
#define BOARD_DEBUG_UART_BASEADDR UART1_BASE
#define BOARD_DEBUG_UART_INSTANCE 4U
#define BOARD_DEBUG_UART_CLK_FREQ
\
    CLOCK_GetPllFreq(kCLOCK_SystemPll1Ctrl) /
(CLOCK_GetRootPreDivider(kCLOCK_RootUart4)) / \
    (CLOCK_GetRootPostDivider(kCLOCK_RootUart4)) / 10
#define BOARD_UART_IRQ UART1_IRQn
#define BOARD_UART_IRQ_HANDLER UART1_IRQHandler
```

Needs to be changed to:

```
#define BOARD_DEBUG_UART_BASEADDR UART3_BASE
#define BOARD_DEBUG_UART_INSTANCE 3U
#define BOARD_DEBUG_UART_CLK_FREQ
\
```




```

    CLOCK_GetPllFreq(kCLOCK_SystemPll1Ctrl) /
(CLOCK_GetRootPreDivider(kCLOCK_RootUart3)) / \
    (CLOCK_GetRootPostDivider(kCLOCK_RootUart3)) / 10
#define BOARD_UART_IRQ UART3_IRQn
#define BOARD_UART_IRQ_HANDLER UART3_IRQHandler

```

clock_config.c

```

CLOCK_SetRootMux(kCLOCK_RootUart3,
kCLOCK_UartRootmuxSysPll1Div10); /* Set UART source to SysPLL1
Div10 80MHZ */

    CLOCK_SetRootDivider(kCLOCK_RootUart3, 1U, 1U);
/* Set root clock to 80MHZ/ 1= 80MHZ */

```

Needs to be changed to:

```

CLOCK_SetRootMux(kCLOCK_RootUart3,
kCLOCK_UartRootmuxSysPll1Div10); /* Set UART source to SysPLL1
Div10 80MHZ */

    CLOCK_SetRootDivider(kCLOCK_RootUart3, 1U, 1U);
/* Set root clock to 80MHZ/ 1= 80MHZ */

```

pin_muc.c

```

IOMUXC_SetPinMux(IOMUXC_UART1_RXD_UART1_RX, 0U);
    IOMUXC_SetPinConfig(IOMUXC_UART1_RXD_UART1_RX,
                        IOMUXC_SW_PAD_CTL_PAD_DSE(6U) |
                        IOMUXC_SW_PAD_CTL_PAD_FSEL(2U));
IOMUXC_SetPinMux(IOMUXC_UART1_TXD_UART1_TX, 0U);
    IOMUXC_SetPinConfig(IOMUXC_UART1_TXD_UART1_TX,
                        IOMUXC_SW_PAD_CTL_PAD_DSE(6U) |
                        IOMUXC_SW_PAD_CTL_PAD_FSEL(2U));

```

Needs to be changed to:

```

IOMUXC_SetPinMux(IOMUXC_UART3_RXD_UART3_RX, 0U);
    IOMUXC_SetPinConfig(IOMUXC_UART3_RXD_UART3_RX,
                        IOMUXC_SW_PAD_CTL_PAD_DSE(6U) |
                        IOMUXC_SW_PAD_CTL_PAD_FSEL(2U));
IOMUXC_SetPinMux(IOMUXC_UART3_TXD_UART3_TX, 0U);
    IOMUXC_SetPinConfig(IOMUXC_UART3_TXD_UART3_TX,

```

Building the examples

```
IOMUXC_SW_PAD_CTL_PAD_DSE(6U) |  
IOMUXC_SW_PAD_CTL_PAD_FSEL(2U));
```

6.2 Prepare.sh

This script will configure board relevant settings and create symlinks to the board specific header files. You can execute the script in your terminal by typing

```
./prepare.sh
```

and follow the instructions:

```
Choose one of the following boards for which you want to build the  
examples:  
efusa9x[1] picocomma9x[2]      ...[...]      picocoremx8mp[6]  
Enter number in []-brackets for the corresponding board: 6  
Do you want a Release or Debug build?  
(r/d) [default: r]: r  
All set up, starting cmake...
```

If you have different DRAM sizes for your boards, just edit `prepare.sh` to your personal preferences. If you've chosen the `picocoremx8mp` board you'll be asked to select a module variant.

Most of the examples can be run from TCM or directly from the QSPI-flash. In future releases it will be possible to choose this in the `prepare.sh` script but for now only TCM is supported.



6.3 Make

The `prepare.sh` script will configure and invoke *CMake* to generate a Makefile. After this, you can run

```
make -jN
```

To build all examples located in `examples/fsimx8mp` and install the binaries to `bin/$BOARD`.

`N` is the number of cores your CPU have.

If you want to build a specific example just type

```
make -jN example_name && make install/fast
```

to build and install the binary of the chosen example.

Type

```
make help
```

for a list of possible examples for make.

By executing

```
make clean-all
```

you can clean up all build files and binaries. This will be necessary if you make changes to the `CMakeLists.txt` in the root directory of the FreeRTOS BSP or when the target module has changed i.e. V3/V4 to V5/V6. In this case, just rerunning the `prepare.sh` script won't be sufficient and will lead to faulty variables.

7 Adding custom boards

If you're using a custom board, you have to tell the `prepare.sh` script about its existence and create some configuration files (or simply copy the existing ones).

To tell the script about it, change the following lines in the `prepare.sh` script:

```
declare -a SUPPORTED_BOARDS=("efusa9x" "picocoma9x" "picocoremx6sx"  
"picocoremx7ulp" "picocoremx8mm" "picocoremx8mp" "boardname")
```

where *boardname* represent the name of your board and an entry to

```
declare -a SUPPORTED_SOCS=("fsimx6sx" "fsimx6sx" "fsimx6sx" "fsimx7ulp" "fsimx6sx"  
"fsimx8mm" "fsimx8mp" "SOC")
```

so the number of your *boardname* matches the number of its specific SOC.

The following files, located at `examples/fsimx6sx/board_specific_files/boardname`, are needed to successfully compile the BSP for your own board:

- *boardname*_board.c
- *boardname*_board.h
- *boardname*_pin_mux.c
- *boardname*_pin_mux.h
- *boardname*_gpio_pins.c
- *boardname*_gpio_pins.h

boardname must be replaced by the name of your board. This must be same name as uses in the `SUPPORTED_BOARDS` array used in the `prepare.sh` script.



8 FreeRTOS examples

In this chapter we will provide you with necessary information on the demo and driver applications.

The “**Description**” will inform you about the demo's purpose.

In the “**Modifications made**” section you will find useful information if changes were made to certain files by F&S and the reason behind these changes.

“**Changes needed**” is the most important section. You will find the information necessary to successfully build and execute the examples here.

The last section, “**Execute binary**” will tell you the required steps to execute the image built.

8.1 General build and run information

Connect UART1 (Cortex M7) and UART2 (Cortex A53) with two serial cables (serial-to-modem) to your PC.

Open up two Terminals and connect the UARTs via the COM interface and the following settings:

```
Baud rate: 115200
Data: 8 bit
Parity: none
Stop: 1 bit
Flow control: none
Transmit delay: 0 msec/char 0 msec/line
```

Build the examples like described in **Building the examples** and copy them to you tftp-directory.

To use the SDMA examples, the device tree has to be modified so that the M7 has access to the SDMA module. However, this will also take away the SPI_A from the A53 core.

To do so, please change the #if 0 to #if 1

```
1143 #if 0
1 #ifdef SUPPORT_M4
2 &sdma1 {
3     status = "disabled";
4 };
5 #endif
6 #endif
```

Figure 3: Device tree entry

8.2 Cmsis_driver_examples

8.2.1 ecspi

Int_loopback_transfer

Description

CMSIS-Driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The `cmsis_ecspi_int_loopback_transfer` example shows how to use CMSIS ECSPi driver in interrupt way:

In this example, ECSPi will do a loopback transfer in interrupt way, so, there is no need to set up any pins. And we should set the `ECSPi->TESTREG[LBC]` bit, this bit is used in Master mode only. When this bit is set, the ECSPi connects the transmitter and receiver sections internally, and the data shifted out from the most-significant bit of the shift register is looped back into the least-significant bit of the Shift register. In this way, a self-test of the complete transmit/receive path can be made. The output pins are not affected, and the input pins are ignored.

Modifications made

None.

Changes needed

None.

Execute binary

Run

```
setenv m7_file "cmsis_ecspi_int_loopback_transfer.bin"  
run m7
```



Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
This is ECSPI CMSIS interrupt loopback transfer example.  
The ECSPI will connect the transmitter and receiver sections  
internally.  
Start transfer...  
  
This is ECSPI_MasterSignalEvent_t.  
  
Transfer completed!  
ECSPI transfer all data matched!
```

sdma_loopback_transfer

Description

CMSIS-Driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The `cmsis_ecspi_sdma_loopback_transfer` example shows how to use CMSIS ECSPi driver in SDMA way:

In this example, ECSPi will do a loopback transfer in SDMA way, so, there is no need to set up any pins. And we should set the `ECSPi->TESTREG[LBC]` bit, this bit is used in Master mode only. When this bit is set, the ECSPi connects the transmitter and receiver sections internally, and the data shifted out from the most-significant bit of the shift register is looped back into the least-significant bit of the Shift register.

In this way, a self-test of the complete transmit/receive path can be made. The output pins are not affected,

and the input pins are ignored.

Modifications made

None.

Changes needed

To use the example, please mind the [necessary changes](#).

Execute binary

Run

```
setenv m7_file "cmsis_ecspi_sdma_loopback_transfer.bin"
run m7
```

to start the example.

Output

The log below shows the output of the hello world demo in the terminal window:

```
This is ECSPI CMSIS SDMA loopback transfer example.  
The ECSPI will connect the transmitter and receiver sections  
internally.  
Start transfer...  
  
    This is ECSPI_MasterSignalEvent_t  
  
Transfer completed!  
ECSPI transfer all data matched!
```

8.2.2 i2c

int_b2b_transfer / Master

Description

CMSIS-Driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The `i2c_interrupt_b2b_transfer_master` example shows how to use CMSIS i2c driver as master to do board to board transfer with interrupt:

In this example, one i2c instance as master and another i2c instance on the other board as slave. Master sends a piece of data to slave and receive a piece of data from slave. This example checks if the data received from slave is correct.

Modifications made

Changes needed

Function	PCOREMX8MM Rev 1.3	PCOREMX8MX Rev 1.2	BBDSI Rev 1.3
I2C_A_SCL		J1_4	J11_16
I2C_A_SDA		J1_6	J11_17
GND		---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "cmsis_ii2c_b2b_transfer_master.bin"
run m7
```

to start the example.

Output

When the demo runs successfully, the following message is displayed in the terminal:

```
CMSIS I2C board2board interrupt example -- Master transfer.  
Master will send data :  
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f  
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f  
  
Receive sent data from slave :  
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f  
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f  
  
End of I2C example .
```

int_b2b_transfer / Slave**Description**

CMSIS-Driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The `i2c_interrupt_b2b_transfer_master` example shows how to use CMSIS i2c driver as master to do board to board transfer with interrupt:

In this example, one i2c instance as master and another i2c instance on the other board as slave. Master sends a piece of data to slave and receive a piece of data from slave. This example checks if the data received from slave is correct.

Modifications made**Changes needed**

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "cmsis_ii2c_b2b_transfer_slave.bin"
run m7
```

to start the example.

Output

When the demo runs successfully, the following message is displayed in the terminal:

```
CMSIS I2C board2board interrupt example -- Slave transfer.
```

```
Slave received data :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7
```

```
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f
```

```
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17
```

```
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
End of I2C example .
```

8.2.3 uart

cmsis_uart_interrupt_transfer

Description

CMSIS-Driver defines generic peripheral driver interfaces for middleware making it reusable across a wide range of supported microcontroller devices. The API connects microcontroller peripherals with middleware that implements for example communication stacks, file systems, or graphic user interfaces. More information and usage method please refer to <http://www.keil.com/pack/doc/cmsis/Driver/html/index.html>.

The `cmsis_uart_interrupt_transfer` example shows how to use `uart cmsis driver` in interrupt way:

In this example, one `uart` instance connect to PC through `uart`, the board will send back all characters that PC send to the board.

The example echo every 8 characters, so input 8 characters every time.

Modifications made

None.

Changes needed

None.

Execute binary

Run

```
setenv m7_file "cmsis_uart_interrupt_transfer.bin"
run m7
```

to start the example.

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
USART CMSIS interrupt example
Board receives 8 characters then sends them out
Now please input:
```

cmsis_uart_sdma_transfer

This example has not been ported yet.



8.3 demo_apps

Remark

The documentation is based on the FreeRTOS BSP 2.10 package from NXP.

Some of the software examples provided by NXP expect a certain module or sensor to be available on the board. Since F&S boards do NOT provide these, the associated examples weren't ported at all.

8.3.1 hello_world

Description

The Hello World demo application provides a sanity check for the new SDK build environments and board bring up. The Hello World demo prints the "Hello World" string to the terminal using the SDK UART drivers. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.

Please input one character at a time. If you input too many characters each time, the receiver may overflow because the low level UART uses simple polling way for receiving. If you want to try inputting many characters each time, just define `DEBUG_CONSOLE_TRANSFER_NON_BLOCKING` in your project to use the advanced debug console utility.

Modifications made

None.

Changes needed

None.

Execute binary

Run

```
setenv m7_file "hello_world.bin"
run m7
```

to start the example.

Output

The log below shows the output of the hello world demo in the terminal window:

```
hello world.
```

8.3.2 sai_low_power_audio

This example has not been ported yet.

8.4 driver_examples

8.4.1 ecspi

ecspi_loopback

Description

The ecspi_loopback demo shows how the ecspi do a loopback transfer internally. The ECSPi connects the transmitter and receiver sections internally, and the data shifted out from the most-significant bit of the shift register is looped back into the least-significant bit of the Shift register. In this way, a self-test of the complete transmit/receive path can be made. The output pins are not affected, and the input pins are ignored.

Modifications made

None.

Changes needed

None.

Execute binary

Run

```
setenv m7_file "ecspi_loopback.bin"
run m7
```

to start the example.

Output

If the demo run successfully, the below log will be print in the terminal window:

```
***ECSPi Loopback Demo***

This demo is a loopback transfer test for ECSPi.
The ECSPi will connect the transmitter and receiver sections
internally.
So, there is no need to connect the MOSI and MISO pins.

ECSPi loopback test pass!
```

interrupt_b2b_transfer / Master

Description

The `ecspi_interrupt_b2b_transfer` example shows how to use ECSPi driver in interrupt way:

In this example, we need two boards, one board used as ECSPi master and another board used as ECSPi slave. The file `'ecspi_interrupt_b2b_transfer_master.c'` includes the ECSPi master code. This example uses the transactional API in ECSPi driver.

1. ECSPi master send/received data to/from ECSPi slave in interrupt. (ECSPi Slave using interrupt to receive/send the data)

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ecspi_interrupt_b2b_transfer_master.bin"
run m7
```

to start the example.



FreeRTOS examples

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
ECSPI board to board interrupt example.
This example use one board as master and another as slave.
Master and slave uses interrupt way. Slave should start first.
Please make sure you make the correct line connection. Basically,
the connection is:
ECSPI_master -- ECSPI_slave
  CLK      --   CLK
  PCS      --   PCS
  MOSI     --   MOSI
  MISO     --   MISO
  GND      --   GND

Master transmit:

 1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40

ECSPI transfer all data matched!

Master received:

 1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40

Press any key to run again
```



interrupt_b2b_transfer / Slave

Description

The `ecspi_interrupt_b2b_transfer` example shows how to use ECSPi driver in interrupt way:

In this example, we need two boards, one board used as ECSPi master and another board used as ECSPi slave. The file `'ecspi_interrupt_b2b_transfer_slave.c'` includes the ECSPi slave code. This example uses the transactional API in ECSPi driver.

1. ECSPi master send/received data to/from ECSPi slave in interrupt. (ECSPi Slave using interrupt to receive/send the data)

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ecspi_interrupt_b2b_transfer_slave.bin"
run m7
```

to start the example.



FreeRTOS examples

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
ECSPI board to board interrupt example.

Slave example is running...

Slave starts to receive data!
This is ECSPI slave transfer completed callback.
It's a successful transfer.

Slave starts to transmit data!
This is ECSPI slave transfer completed callback.
It's a successful transfer.

Slave receive:
    1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
   11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
   21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
   31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40

Slave example is running...
```



polling_b2b_transfer / Master**Description**

The `ecspi_polling_b2b_transfer` example shows how to use ECSPi driver in polling way:

In this example, we need two boards, one board used as ECSPi master and another board used as ECSPi slave. The file `'ecspi_polling_b2b_transfer_master.c'` includes the ECSPi master code.

1. ECSPi master send/receive data to/from ECSPi slave in polling. (ECSPi Slave using interrupt to receive/send the data)

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ecspi_polling_b2b_transfer_master.bin"
run m7
```

to start the example.

Output

If the demo runs successfully, the log below will be print in the terminal window:

```
ECSPi board to board polling example.
```



FreeRTOS examples

This example use one board as master and another as slave.
Master uses polling way and slave uses interrupt way.
Please make sure you make the correct line connection. Basically,
the connection is:

```
ECSPI_master -- ECSPI_slave
```

```
CLK      --    CLK
PCS      --    PCS
MOSI     --    MOSI
MISO     --    MISO
GND      --    GND
```

Master transmit:

```
 1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40
```

ECSPI transfer all data matched!

Master received:

```
 1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40
```

Press any key to run again



polling_b2b_transfer / Slave**Description**

The `ecspi_polling_b2b_transfer` example shows how to use ECSPi driver in polling way:

In this example, we need two boards, one board used as ECSPi master and another board used as ECSPi slave. The file `'ecspi_polling_b2b_transfer_slave.c'` includes the ECSPi slave code.

1. ECSPi master send/received data to/from ECSPi slave in polling . (ECSPi Slave using interrupt to receive/send the data)

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ecspi_polling_b2b_transfer_master.bin"
run m7
```

to start the example.

FreeRTOS examples

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
ECSPI board to board polling example.

Slave example is running...

Slave starts to receive data!
This is ECSPI slave transfer completed callback.
It's a successful transfer.

Slave starts to transmit data!
This is ECSPI slave transfer completed callback.
It's a successful transfer.

Slave receive:
    1  2  3  4  5  6  7  8  9  A  B  C  D  E  F 10
   11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
   21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30
   31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40

Slave example is running...
```



8.4.2 canfd

interrupt_transfer

Description

This example demonstrates the CAN FD functionality. Two boards are connected via CAN High and CAN Low while one board acts as node A and the other as node B. Node A sends a CAN message to node B when a key is pressed.

HINT: Only Industrial i.MX8MP supports CAN-FD. Therefore, ensure that both boards are equipped with the correct CPU.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```
setenv m7_file "canfd_interrupt_transfer.bin"
run m7
```

to start the example.



FreeRTOS examples

Output

Node A

```
***** FLEXCAN Interrupt EXAMPLE *****

Message format: Standard (11 bit id)

Message buffer 9 used for Rx.

Message buffer 8 used for Tx.

Interrupt Mode: Enabled

Operation Mode: TX and RX --> Normal

*****

Please select local node as A or B:

Note: Node B should start first.

Node:a

Press any key to trigger one-shot transmission

Rx MB ID: 0x123, Rx MB data: 0x0, Time stamp: 8877

Press any key to trigger the next transmission!

Rx MB ID: 0x123, Rx MB data: 0x1, Time stamp: 32459

Press any key to trigger the next transmission!
```

Node B

```
***** FLEXCAN Interrupt EXAMPLE *****
```



```
Message format: Standard (11 bit id)

Message buffer 9 used for Rx.

Message buffer 8 used for Tx.

Interrupt Mode: Enabled

Operation Mode: TX and RX --> Normal

*****

Please select local node as A or B:

Note: Node B should start first.

Node:b

Start to Wait data from Node A

Rx MB ID: 0x321, Rx MB data: 0x0, Time stamp: 5759

Wait Node A to trigger the next transmission!

Rx MB ID: 0x321, Rx MB data: 0x1, Time stamp: 57276

Wait Node A to trigger the next transmission!
```

loopback

Description

This example demonstrates the CAN FD functionality. The board connects the RX and TX message buffers internally.



FreeRTOS examples

HINT: Only Industrial i.MX8MP supports CAN-FD. Therefore, ensure that both boards are equipped with the correct CPU.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```
setenv m7_file "canfd_loopback.bin"  
run m7
```

to start the example.

Output

```
==FlexCAN loopback functional example -- Start.==  
  
Send message from MB8 to MB9  
tx word0 = 0x0  
tx word1 = 0x1  
tx word2 = 0x2  
tx word3 = 0x3
```



```

Received message from MB9
rx word0 = 0x0
rx word1 = 0x1
rx word2 = 0x2
rx word3 = 0x3

==FlexCAN loopback functional example -- Finish.==

```

loopback_transfer

Description

This example demonstrates the CAN FD functionality. The board connects the RX and TX message buffers internally.

HINT: Only Industrial i.MX8MP supports CAN-FD. Therefore, ensure that both boards are equipped with the correct CPU.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```

setenv m7_file "canfd_loopback_transfer.bin"
run m7

```

to start the example.



FreeRTOS examples

Output

```
==FlexCAN loopback functional example -- Start.==

Send message from MB8 to MB9
tx word0 = 0x0
tx word1 = 0x1
tx word2 = 0x2
tx word3 = 0x3
tx word4 = 0x4
tx word5 = 0x5
tx word6 = 0x6
tx word7 = 0x7

Received message from MB9
rx word0 = 0x0
rx word1 = 0x1
rx word2 = 0x2
rx word3 = 0x3
rx word4 = 0x4
rx word5 = 0x5
rx word6 = 0x6
rx word7 = 0x7

==FlexCAN loopback functional example -- Finish.==
```

ping_pong_buffer_transfer

Description

This example demonstrates the CAN FD functionality. Two boards are connected via CAN High and CAN Low while one board acts as node A and the other as node B. Node A sends a defined number of CAN messages to node B put in by the user.

HINT: Only Industrial i.MX8MP supports CAN-FD. Therefore, ensure that both boards are equipped with the correct CPU.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5



SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```
setenv m7_file "canfd_ping_pong_buffer_transfer.bin"
run m7
```

to start the example.

Output

Node A

```
***** FLEXCAN PingPong Buffer Example *****
Message format: Standard (11 bit id)
Node B Message buffer 1 to 4 used as Rx queue 1.
Node B Message buffer 5 to 8 used as Rx queue 2.
Node A Message buffer 8 used as Tx.
*****
Please select local node as A or B:
Note: Node B should start first.
Node:A
```

Node B

```
Please select local node as A or B:
Note: Node B should start first.
```



FreeRTOS examples

```
Node:B
Start to Wait data from Node A

Read Rx MB from Queue 1.
Rx MB ID: 0x321, Rx MB data: 0x0, Time stamp: 20971
Rx MB ID: 0x321, Rx MB data: 0x1, Time stamp: 56187
Rx MB ID: 0x321, Rx MB data: 0x2, Time stamp: 56867
Rx MB ID: 0x321, Rx MB data: 0x3, Time stamp: 57547
Read Rx MB from Queue 2.
Rx MB ID: 0x321, Rx MB data: 0x4, Time stamp: 56187
Rx MB ID: 0x321, Rx MB data: 0x5, Time stamp: 56867
Rx MB ID: 0x321, Rx MB data: 0x6, Time stamp: 57547
Rx MB ID: 0x321, Rx MB data: 0x7, Time stamp: 57547
Wait Node A to trigger the next 8 messages!
```

8.4.3 flexcan

interrupt_transfer

Description

This example demonstrates the CAN FD functionality. Two boards are connected via CAN High and CAN Low while one board acts as node A and the other as node B. Node A sends a CAN message to node B when a key is pressed.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3



Execute binary

Run

```
setenv m7_file "flexcan_interrupt_transfer.bin"  
run m7
```

to start the example.



FreeRTOS examples

Output

Node A

```
***** FLEXCAN Interrupt EXAMPLE *****

Message format: Standard (11 bit id)

Message buffer 9 used for Rx.

Message buffer 8 used for Tx.

Interrupt Mode: Enabled

Operation Mode: TX and RX --> Normal

*****

Please select local node as A or B:

Note: Node B should start first.

Node:a

Press any key to trigger one-shot transmission

Rx MB ID: 0x123, Rx MB data: 0x0, Time stamp: 8877

Press any key to trigger the next transmission!

Rx MB ID: 0x123, Rx MB data: 0x1, Time stamp: 32459

Press any key to trigger the next transmission!
```

Node B

```
***** FLEXCAN Interrupt EXAMPLE *****
```



```
Message format: Standard (11 bit id)

Message buffer 9 used for Rx.

Message buffer 8 used for Tx.

Interrupt Mode: Enabled

Operation Mode: TX and RX --> Normal

*****

Please select local node as A or B:

Note: Node B should start first.

Node:b

Start to Wait data from Node A

Rx MB ID: 0x321, Rx MB data: 0x0, Time stamp: 5759

Wait Node A to trigger the next transmission!

Rx MB ID: 0x321, Rx MB data: 0x1, Time stamp: 57276

Wait Node A to trigger the next transmission!
```

loopback

Description

This example demonstrates the CAN FD functionality. The board connects the RX and TX message buffers internally.



FreeRTOS examples

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```
setenv m7_file "flexcan_loopback.bin"  
run m7
```

to start the example.



Output

```

==FlexCAN loopback functional example -- Start.==

Send message from MB8 to MB9
tx word0 = 0x11223344
tx word1 = 0x55667788

Received message from MB9
rx word0 = 0x11223344
rx word1 = 0x55667788

==FlexCAN loopback functional example -- Finish.==

```

loopback_transfer**Description**

This example demonstrates the CAN FD functionality. The board connects the RX and TX message buffers internally.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary

Run

```
setenv m7_file "flexcan_loopback_transfer.bin"
```



FreeRTOS examples

```
run m7
```

to start the example.

Output

```
==FlexCAN loopback example -- Start.==  
  
Send message from MB8 to MB9  
tx word0 = 0x11223344  
tx word1 = 0x55667788  
  
Received message from MB9  
rx word0 = 0x11223344  
rx word1 = 0x55667788  
  
==FlexCAN loopback example -- Finish.==
```

ping_pong_buffer_transfer

Description

This example demonstrates the CAN FD functionality. Two boards are connected via CAN High and CAN Low while one board acts as node A and the other as node B. Node A sends a defined number of CAN messages to node B put in by the user.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.2
SPI_B_MISO	J1_58	J11_5
SPI_B_MOSI	J1_60	J11_6
SPI_B_SCLK	J1_62	J11_3
SPI_B_SS0	J1_64	J11_4
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
CAN1H	-	J7_4
CAN1L	-	J7_3

Execute binary



Run

```
setenv m7_file "flexcan_ping_pong_buffer_transfer.bin"
run m7
```

to start the example.

Output

Node A

```
***** FLEXCAN PingPong Buffer Example *****
Message format: Standard (11 bit id)
Node B Message buffer 1 to 4 used as Rx queue 1.
Node B Message buffer 5 to 8 used as Rx queue 2.
Node A Message buffer 8 used as Tx.
*****
Please select local node as A or B:
Note: Node B should start first.
Node:A
```

FreeRTOS examples

Node B

```
Please select local node as A or B:
Note: Node B should start first.
Node:B
Start to Wait data from Node A

Read Rx MB from Queue 1.
Rx MB ID: 0x321, Rx MB data: 0x0, Time stamp: 20971
Rx MB ID: 0x321, Rx MB data: 0x1, Time stamp: 56187
Rx MB ID: 0x321, Rx MB data: 0x2, Time stamp: 56867
Rx MB ID: 0x321, Rx MB data: 0x3, Time stamp: 57547
Read Rx MB from Queue 2.
Rx MB ID: 0x321, Rx MB data: 0x4, Time stamp: 56187
Rx MB ID: 0x321, Rx MB data: 0x5, Time stamp: 56867
Rx MB ID: 0x321, Rx MB data: 0x6, Time stamp: 57547
Rx MB ID: 0x321, Rx MB data: 0x7, Time stamp: 57547
Wait Node A to trigger the next 8 messages!
```



8.4.4 gpio

led_output

Description

The GPIO Example project is a demonstration program that uses the KSDK software to manipulate the general-purpose outputs. The example is supported by the set, clear, and toggle write-only registers for each port output data register. The example take turns to shine the LED.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
SPI_B_MOSI / LED	J1_60	J11_6

Execute binary

Run

```
setenv m7_file "igpio_led_output.bin"
run m7
```

to start the example.

Output

When the example runs successfully, the following message is displayed in the terminal:

```
GPIO Driver example
The LED is blinking.
```

FreeRTOS examples

8.4.5 gpt

gpt capture

The example can't be ported at the moment because no reasonable pin is available.

gpt_timer

Description

The `gpt_timer` project is a simple demonstration program of the SDK GPT driver. It sets up the GPT hardware block to trigger a periodic interrupt after every 1 second. When the GPT interrupt is triggered a message is printed on the UART terminal.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "gpt_timer.bin"  
run m7
```

to start the example.

Output

When the example runs successfully, the following message is displayed in the terminal:



```
Press any key to start the example
```

```
s
```

```
Starting GPT timer ...
```

```
GPT interrupt is occurred !
```

```
GPT interrupt is occurred !
```

```
GPT interrupt is occurred !
```

```
GPT interrupt is occurred !
```

```
.
```

```
.
```

```
.
```

```
GPT interrupt is occurred !
```

```
.
```

```
.
```

```
.
```

8.4.6 i2c

interrupt_b2b_transfer / Master

Description

The `i2c_interrupt_b2b_transfer_master` example shows how to use i2c driver as master to do board to board transfer with interrupt:

In this example, one i2c instance acts as the master and another i2c instance on the other board as slave. The master sends a piece of data to the slave, and receives a piece of data from the slave. This example checks if the data received from the slave is correct.

Modifications made

PCOREMX8MM: Changed I2C port to I2C1

PCOREMX8MX: Changed I2C port to I2C4

Changes needed

Function	PCOREMX8MM Rev 1.3	PCOREMX8MX Rev 1.2	BBDSI Rev 1.3
I2C_A_SCL		J1_4	J11_16
I2C_A_SDA		J1_6	J11_17
GND		---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ii2c_interrupt_b2b_transfer_master.bin"
run m7
```

to start the example.

Output

When the example runs successfully, following information can be seen on the terminal:

When the demo runs successfully, the following message is displayed in the terminal:

```
I2C board2board interrupt example -- Master transfer.
```

```
Master will send data :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7
```

```
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f
```

```
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17
```

```
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
Receive sent data from slave :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7
```

```
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f
```

```
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17
```

```
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
End of I2C example .
```

FreeRTOS examples

interrupt_b2b_transfer / Slave

Description

The `ii2c_interrupt_b2b_transfer_slave` example shows how to use i2c driver as slave to do board to board transfer with interrupt:

In this example, one i2c instance as slave and another i2c instance on the other board as master. Master sends a piece of data to slave, and receive a piece of data from slave. This example checks if the data received from slave is correct.

Modifications made

PCOREMX8MM: Changed I2C port to I2C1

PCOREMX8MX: Changed I2C port to I2C4

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ii2c_interrupt_b2b_transfer_slave.bin"
run m7
```

to start the example.

Output

When the demo runs successfully, the following message is displayed in the terminal:




```
I2C board2board interrupt example -- Slave transfer.
```

```
Slave received data :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f  
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
End of I2C example .
```

FreeRTOS examples

polling_b2b_transfer / Master

Description

The `ii2c_polling_b2b_transfer_master` example shows how to use i2c driver as master to do board to board transfer using polling method:

In this example, one i2c instance as master and another i2c instance on the other board as slave. Master sends a piece of data to slave, and receive a piece of data from slave. This example checks if the data received from slave is correct.

Modifications made

PCOREMX8MM: Changed I2C port to I2C1

PCOREMX8MX: Changed I2C port to I2C4

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ii2c_polling_b2b_transfer_master.bin"
run m7
```

to start the example.

Output

When the demo runs successfully, the following message is displayed in the terminal:



```
I2C board2board polling example -- Master transfer.
```

```
Master will send data :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f  
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
Receive sent data from slave :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f  
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
End of I2C example .
```

FreeRTOS examples

polling_b2b_transfer / Slave

Description

The `i2c_polling_b2b_transfer_slave` example shows how to use i2c driver as slave to do board to board transfer with a polling master:

In this example, one i2c instance as slave and another i2c instance on the other board as master. Master sends a piece of data to slave, and receive a piece of data from slave. This example checks if the data received from slave is correct.

Modifications made

PCOREMX8MM: Changed I2C port to I2C1

PCOREMX8MX: Changed I2C port to I2C4

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Execute binary

Run

```
setenv m7_file "ii2c_polling_b2b_transfer_slave.bin"
run m7
```

to start the example.



Output

When the demo runs successfully, the following message is displayed in the terminal:

```
I2C board2board polling example -- Slave transfer.
```

```
Slave received data :
```

```
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7
```

```
0x 8  0x 9  0x a  0x b  0x c  0x d  0x e  0x f
```

```
0x10  0x11  0x12  0x13  0x14  0x15  0x16  0x17
```

```
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e  0x1f
```

```
End of I2C example .
```

8.4.7 pdm

Hasn't been ported yet.

8.4.8 pwm

Description

The PWM example shows how to setup and generate a PWM signal. The frequency and duty cycle can be programmed. When booting the A53 and using the default configuration set by the function `PWM_GetDefaultConfig()`, the signal will be gated off by the Power State Coordination Interface (PSCI) to save energy. To counter this behavior some modifications have been made to keep the signal active.

Modifications made

pwm.c:

```
pwmConfig.enableStopMode = true;  
pwmConfig.enableDozeMode = true;  
pwmConfig.enableWaitMode = true;  
pwmConfig.enableDebugMode = true;
```

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
PWM	J2_63	J11_34

Execute binary

First run

```
setenv m7_file "ipwm.bin"  
run m7
```

Output

The following message is displayed in the terminal window:

```
PWM driver example
```

On an oscilloscope you should see clear rectangular pulses. Alternatively, a LED can be used. It should visibly flash with a relatively high frequency.

8.4.9 rdc

Description

The RDC example shows how to control the peripheral and memory region access policy using RDC and RDC_SEMA42.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "rdc.bin"  
run m7
```

Output

The log below is shown in the terminal window:

```
RDC Example:  
RDC Peripheral access control  
RDC Peripheral access control with SEMA42  
RDC memory region access control  
  
RDC Example Succes
```

FreeRTOS examples

8.4.10 sai

interrupt_transfer

Hasn't been ported yet.

sdma_transfer

Hasn't been ported yet.



8.4.11 sdma

memory_to_memory

Description

The EDMA memory to memory example is a simple demonstration program that uses the SDK software. It executes one shot transfer from source buffer to destination buffer using the SDK EDMA drivers. The purpose of this example is to show how to use the EDMA and to provide a simple example for debugging and further development.

Modifications made

None.

Changes needed

To use the example, please mind the [necessary changes](#).

Execute binary

First run

```
setenv m7_file "sdma_memory_to_memory.bin"
run m7
```

Output

When the example runs successfully, you can see the similar information from the terminal as below.

```
SDMA memory to memory transfer example begin.

Destination Buffer:
0      0      0      0

SDMA memory to memory transfer example finish.

Destination Buffer:
1      2      3      4
```

scatter_gather

Description

The SDMA scatter gather example is a simple demonstration program that uses the SDK software. It executes several shots transfer from source buffer to destination buffer using the SDK SDMA drivers. The purpose of this example is to show how to use the SDMA and to provide a scatter gather example for debugging and further development.

Modifications made

None.

Changes needed

To use the example, please mind the [necessary changes](#).

Execute binary

First run

```
setenv m7_file "sdma_scatter_gather.bin"
run m7
```

Output

When the example runs successfully, you can see the similar information from the terminal as below.

```
SDMA scatter_gather transfer example begin.

Destination Buffer:
0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0

SDMA scatter_gather transfer example finish.

Destination Buffer:
0      1      2      3      4      5      6      7      8
9      10     11     12     13     14     15
~~~~~
```



8.4.12 sema4

Description

The sema4 uboot example shows how to use SEMA4 driver to lock and unlock a sema gate, the notification IRQ is also demonstrated in this example. This example should work together with uboot. This example runs on Cortex-M core, the uboot runs on the Cortex-A core.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "sema4_uboot.bin"
run m7
```

Output

Follow the output log, lock and unlock the sema4 gate in uboot. The whole log:

```
SEMA4 uboot example start
Lock sema4 gate in uboot using:
> mw.b 0x30ac0000 1 1
Unlock sema4 gate in uboot using:
> mw.b 0x30ac0000 0 1
SEMA4 uboot example success
```

8.4.13 tmu

tmu_2_monitor_threshold

Description

The TMU example shows how to configure TMU register to monitor and report the temperature from the temperature measurement site located on the chip.

TMU has access to temperature measurement site located on the chip. It can signal an alarm if a programmed threshold is ever exceeded.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "tmu_2_monitor_threshold.bin"
run m7
```

Output

When the example runs successfully, you will see the temperature output from the terminal. If the pre-set threshold is reached, you will see the average temperature.

```
TMU monitor threshold example.
Initialization average temperature is positive 40 celsius degree
Average temperature is positive 50 celsius degree
High temperature average threshold to be reached.
```

tmu_2_temperature_polling

Description

The TMU example shows how to configure TMU register to monitor and report the temperature from the temperature measurement site located on the chip.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "tmu_2_temperature_polling.bin"
run m7
```

Output

When the example runs successfully, you will see the temperature output from the terminal.

```
TMU temperature polling example.
Average temperature is positive 44 celsius degree
Average temperature is positive 44 celsius degree
Average temperature is positive 44 celsius degree
Average temperature is positive 46 celsius degree
Average temperature is positive 46 celsius degree
Average temperature is positive 48 celsius degree
Average temperature is positive 48 celsius degree
Average temperature is positive 48 celsius degree
```

8.4.14 uart

auto_baudrate_detect

Description

The `uart_auto_baudrate_detect` example shows how to use uart auto baud rate detect feature: In this example, one uart instance connect to PC through uart. First, we should send characters a or A to board. The board will set baud rate automatic. After baud rate has set, the board will send back all characters that PC send to the board.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "iuart_auto_baudrate_detect.bin"  
run m7
```

Output

Set any baud rate in your terminal, and send character a or A to board, then

When the demo runs successfully, the log would be seen on the debug terminal like:

```
UART has detect one character A  
Baud rate has been set automatic!  
Board will send back received characters
```

idle_detect_sdma_transfer

Description

The `uart_idle_detect_sdma` example shows how to use `uart` driver in `sdma` way:

In this example, one `uart` instance connect to PC through `uart`, the board will send back all characters that PC send to the board.

`Uart` will receive 8 characters every time, but if the character is less than 8, the idle line interrupt will generate, and abort the `SDMA` receive operation, and send out the received characters.

Modifications made

None.

Changes needed

To use the example, please mind the [necessary changes](#).

Execute binary

First run

```
setenv m7_file "iuart_idle_detect_sdma_transfer.bin"
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
Uart sdma transfer example!
Uart will receive 8 charactes every time, if less characters were
received,
Uart will generate the idle line detect interrupt, SDMA receive
operation will be aborted.
Board will send the received characters out.
Now please input:
```

FreeRTOS examples

hardware_flow_control

Hasn't been ported yet.

interrupt

Description

The `uart_functional_interrupt` example shows how to use uart driver functional API to receive data with interrupt method:

In this example, one uart instance connect to PC through uart, the board will send back all characters that PC send to the board.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "iuart_interrupt.bin"
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
Uart functional interrupt example
Board receives characters then sends them out
Now please input:
```



interrupt_rb_transfer

Description

The `uart_interrupt_ring_buffer` example shows how to use `uart` driver in interrupt way with RX ring buffer enabled:

In this example, one `uart` instance connect to PC through `uart`, the board will send back all characters that PC send to the board.

The example echoes every 8 characters, so input 8 characters every time.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "iuart_interrupt_rb_transfer.bin"  
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
UART RX ring buffer example  
Send back received data  
Echo every 8 bytes
```

FreeRTOS examples

interrupt_transfer

Description

The uart_interrupt example shows how to use uart driver in interrupt way:

In this example, one uart instance connect to PC through uart, the board will send back all characters that PC send to the board.

The example echoes every 8 characters, so input 8 characters every time.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "iuart_interrupt_transfer.bin"  
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
Uart interrupt example  
Board receives 8 characters then sends them out  
Now please input:
```



polling

Description

The uart_polling example shows how to use uart driver in polling way:

In this example, one uart instance connect to PC through uart, the board will send back all characters that PC send to the board.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "iuart_polling.bin"
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
Uart polling example
Board will send back received characters
```

FreeRTOS examples

sdma_transfer

Description

The uart_sdma example shows how to use uart driver in sdma way:

In this example, one uart instance connect to PC through uart, the board will send back all characters that PC send to the board.

The example echoes every 8 characters, so input 8 characters every time.

Modifications made

None.

Changes needed

To use the example, please mind the [necessary changes](#).

Execute binary

First run

```
setenv m7_file "iuart_sdma_transfer.bin"
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
Uart interrupt example
Board receives 8 characters then sends them out
Now please input:

When you input 8 characters, the system will echo it by UART.
```



8.4.15 wdog

Description

The WDOG Example project is to demonstrate usage of the KSDK wdog driver. In this example, implemented to test the wdog.

Please notice that because WDOG control registers are write-once only. And for the field WDT, once software performs a write "1" operation to this bit, it can not be reset/cleared until the next POR, this bit does not get reset/ cleared due to any system reset. So the WDOG_Init function can be called only once after power reset when WDT set, and the WDOG_Disable function can be called only once after reset.

Modifications made

None.

Changes needed

None

Execute binary

First run

```
setenv m7_file "wdog01.bin"  
run m7
```

Output

When the demo runs successfully, the log would be seen on the debug terminal like:

```
***** System Start *****  
System reset by: Power On Reset!  
  
- 3.Test the WDOG refresh function by using interrupt.  
--- wdog Init done---  
  
WDOG has be refreshed!  
WDOG has be refreshed!  
WDOG has be refreshed!  
WDOG has be refreshed!  
WDOG has be refreshed!  
...
```

8.5 multicores_examples

8.5.1 rpmsg_lite_pingpong_rtos_linux_remote

Description

The Multicores RPMsg-Lite pingpong RTOS project is a simple demonstration program that uses the MCUXpresso SDK software and the RPMsg-Lite library and shows how to implement the inter-core communication between cores of the multicores system. The primary core releases the secondary core from the reset and then the inter-core communication is established. Once the RPMsg is initialized and endpoints are created the message exchange starts, incrementing a virtual counter that is part of the message payload. The message pingpong finishes when the counter reaches the value of 100. Then the RPMsg-Lite is deinitialized and the procedure of the data exchange is repeated again.

Shared memory usage

This multicores example uses the shared memory for data exchange. The shared memory region is defined and the size can be adjustable in the linker file. The shared memory region start address and the size have to be defined in linker file for each core equally. The shared memory start address is then exported from the linker to the application.

Modifications made

board.h

```
#define VDEV0_VRING_BASE (0x50000000U)
```

Changes needed

Adjust the RPMsg addresses according to the RAM size.

Execute binary

First run

```
setenv m7_file "rpmsg_lite_pingpong_rtos_linux_remote.bin"
run m7
```

then wait for Linux OS to finish booting. Log in, and type

```
modprobe imx_rpmsg_pingpong
```

to load the pingpong Linux side module.

Output

```
RPMSG Ping-Pong FreeRTOS RTOS API Demo...
RPMSG Share Base Addr is 0xb5000000
```

During boot the Kernel, the ARM Cortex-M7 terminal displays the following information:

```
Link is up!
Nameservice announce sent.
```

After the Linux RPMsg pingpong module was installed, the ARM Cortex-M7 terminal displays the following information:

```
Waiting for ping...
Sending pong...
Waiting for ping...
Sending pong...
Waiting for ping...
Sending pong...
.....
Waiting for ping...
Sending pong...
Ping pong done, deinitializing...
Looping forever...
```

The Cortex-A terminal displays the following information:

```
get 1 (src: 0x1e)
get 3 (src: 0x1e)
.....
get 99 (src: 0x1e)
get 101 (src: 0x1e)
```

8.5.2 rpmsg_lite_str_echo_rtos

Description

The Multicore RPMsg-Lite string echo project is a simple demonstration program that uses the MCUXpresso SDK software and the RPMsg-Lite library and shows how to implement the inter-core communication between cores of the multicore system.

It works with Linux RPMsg master peer to transfer string content back and forth. The name service handshake is performed first to create the communication channels. Next, Linux OS waits for user input to the RPMsg virtual tty. Anything which is received is sent to M7. M7 displays what is received, and echoes back the same message as an acknowledgement. The tty reader on the Linux side can get the message, and start another transaction. The demo demonstrates RPMsg's ability to send arbitrary content back and forth.

The maximum message length supported by RPMsg is now 496 bytes. String longer than 496 will be divided by virtual tty into several messages.

Shared memory usage

This multicore example uses the shared memory for data exchange. The shared memory region is defined and the size can be adjustable in the linker file. The shared memory region start address and the size have to be defined in linker file for each core equally. The shared memory start address is then exported from the linker to the application.

Modifications made

board.h

```
#define VDEV0_VRING_BASE (0x50000000U)
```

Changes needed

Adjust the RPMsg addresses according to the RAM size.

Execute binary

First run

```
setenv m7_file "rpmsg_lite_str_echo_rtos.bin"
run m7
```

then wait for Linux OS to finish booting. Log in, and type

```
modprobe imx_rpmsg_tty
```

to load the pingpong Linux side module.

Run

```
echo test > /dev/ttyRPMSG30
```

to show the output of the RPMsg-Lite str echo demo in the terminal window



Output

```
RPMSG String Echo FreeRTOS RTOS API Demo...  
  
Nameservice sent, ready for incoming messages...
```

After the Linux RPMsg tty module was installed, the ARM Cortex-M7 terminal displays the following information:

```
Get Message From Master Side : "hello world!" [len : 12]
```

After the user write into the ttyRPMSG –device the Cortex-M7 terminal displays the following information:

```
Get Message From Master Side : "test" [len : 4]  
Get New Line From Master Side
```

8.6 rtos_examples

8.6.1 freertos_ecspi

Description

The `freertos_ecspi_loopback` demo shows how the `ecspi` do a loopback transfer internally in FreeRTOS. The ECSPi connects the transmitter and receiver sections internally, and the data shifted out from the most-significant bit of the shift register is looped back into the least-significant bit of the Shift register. In this way, a self-test of the complete transmit/receive path can be made. The output pins are not affected, and the input pins are ignored.

Modifications made

None.

Changes needed

None.

Execute binary

Run

```
setenv m7_file "freertos_ecspi_loopback.bin"
run m7
```

Output

If the demo run successfully, the below log will be print in the terminal window:

```
***FreeRTOS ECSPi Loopback Demo***

This demo is a loopback transfer test for ECSPi.
The ECSPi will connect the transmitter and receiver sections
internally.
So, there is no need to connect the MOSI and MISO pins.

FreeRTOS ECSPi loopback test pass!
```

8.6.2 freertos_event

Description

This document explains the freertos_event example. It shows how task waits for an event (defined set of bits in event group). This event can be set by any other process or interrupt in the system.

The example application creates three tasks. Two write tasks write_task_1 and write_task_2 continuously setting event bit 0 and bit 1.

Read_task is waiting for any event bit and printing actual state on console. Event bits are automatically cleared after read task is entered.

Three possible states can occur:

Both bits are set.

Bit B0 is set.

Bit B1 is set.

Modifications made

None

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_event.bin"  
run m7
```

FreeRTOS examples

Output

After the board is flashed the Tera Term will start printing the state of event bits.

```
Bit B1 is set.  
Bit B0 is set.  
Bit B1 is set.  
Bit B0 is set.  
Bit B1 is set.  
. . .
```



8.6.3 freertos_generic

Description

This document explains the freertos_generic example. It is based on code FreeRTOS documentation from <http://www.freertos.org/Hardware-independent-RTOS-example.html>. It shows combination of several tasks with queue, software timer, tick hook and semaphore.

The example application creates three tasks. The prvQueueSendTask periodically sending data to xQueue queue. The prvQueueReceiveTask is waiting for incoming message and counting number of received messages. Task prvEventSemaphoreTask is waiting for xEventSemaphore semaphore given from vApplicationTickHook. Tick hook give semaphore every 500 ms.

Other hook types used for RTOS and resource statistics are also demonstrated in example:

- vApplicationIdleHook
- vApplicationStackOverflowHook
- vApplicationMallocFailedHook

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_generic.bin"
run m7
```



FreeRTOS examples

Output

After the board is flashed the Tera Term will start periodically printing the state of generic example.

```
Event task is running.  
Receive message counter: 1.  
Receive message counter: 2.  
Receive message counter: 3.  
Receive message counter: 4.  
Receive message counter: 5.  
Receive message counter: 6.  
Receive message counter: 7.  
. . .
```



8.6.4 freertos_hello

Description

The Hello World project is a simple demonstration program that uses the SDK UART driver in combination with FreeRTOS. The purpose of this demo is to show how to use the debug console and to provide a simple project for debugging and further development.

The example application creates one task called `hello_task`. This task print "Hello world." Message via debug console utility and suspend itself.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_hello.bin"
run m7
```

Output

After the board is flashed the Tera Term will print "Hello world" message on terminal.

```
Hello world.
```

8.6.5 freertos_i2c

Description

This example shows how to send and receive data board to board via the I2C driver in FreeRTOS. One Board acts as the master and the other as the slave. FreeRTOS tasks will be created according to the role (Master or Slave) of the board. Single board functionality isn't yet implemented by NXP.

Modifications made

None.

Changes needed

Function	PCOREMX8MP Rev 1.0	BBDSI Rev 1.3
I2C_A_SCL	J1_4	J11_16
I2C_A_SDA	J1_6	J11_17
GND	---	J11_11

Changes needed

If device using than master, set the following line in source code freertos_i2c.c

```
#define I2C_MASTER_SLAVE isMASTER
```

If device using than slave, set the following line in source code freertos_i2c.c

```
#define I2C_MASTER_SLAVE isSLAVE
```

Execute binary

Run on the device as slave

```
setenv m7_file "freertos_i2c_slave.bin"  
run m7
```

Run on the device as master

```
setenv m7_file "freertos_i2c_master.bin"  
run m7
```


Output

Upon successful execution, the terminal window displays the following message:

Master side

```
==FreeRTOS I2C example start.==  
This example use two boards to connect with one as master and  
another as slave.  
  
Master will send data :  
0x 0  0x 1  0x 2  0x 3  0x 4  0x 5  0x 6  0x 7  
...  
0x18  0x19  0x1a  0x1b  0x1c  0x1d  0x1e 0x1f  
Master received data :  
<Same as above>  
  
End of FreeRtos I2C example.
```

Slave side

```
==FreeRTOS I2C example start.==  
This example use two boards to connect with one as master and  
another as slave.  
I2C slave transfer completed successfully.  
  
Slave received data :  
<Same as above>  
  
End of FreeRTOS I2C example.
```

8.6.6 freertos_mutex

Description

This document explains the freertos_mutex example. It shows how mutex manage access to common resource (terminal output).

The example application creates two identical instances of write_task. Each task will lock the mutex before printing and unlock it after printing to ensure that the outputs from tasks are not mixed together.

The test_task accept output message during creation as function parameter. Output message have two parts. If xMutex is unlocked, the write_task_1 acquire xMutex and print first part of message. Then rescheduling is performed. In this moment scheduler check if some other task could run, but second task write_task+_2 is blocked because xMutex is already locked by first write task. The first write_task_1 continue from last point by printing of second message part. Finally the xMutex is unlocked and second instance of write_task_2 is executed.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_mutex.bin"  
run m7
```

Output

After the board is flashed the Tera Term will start periodically printing strings synchronized by mutex.

```
"ABCD | EFGH"  
"1234 | 5678"  
"ABCD | EFGH"  
"1234 | 5678"  
...
```



8.6.7 freertos_queue

Description

This document explains the freertos_queue example. This example introduces simple logging mechanism based on message passing.

Example could be divided in two parts. First part is logger. It contains three tasks:

log_add().....Add new message into the log. Call xQueueSend function to pass new message into message

queue.log_init()....Initialize logger (create logging task and message queue log_queue).

log_task()....Task responsible for printing of log output.

Second part is application of this simple logging mechanism. Each of two tasks write_task_1 and write_task_2 print 5 messages into log.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_queue.bin"
run m7
```

Output

After the board is flashed the Tera Term will show debug console output.

```
Log 0: Task1 Message 0
Log 1: Task2 Message 0
Log 2: Task1 Message 1
Log 3: Task2 Message 1
. . .
Log9: Task2 Message 4
```

8.6.8 freertos_sem

Description

This document explains the freertos_sem example, what to expect when running it and a brief introduction to the API. The freertos_sem example code shows how semaphores works. Two different tasks are synchronized in bilateral rendezvous model.

The example uses four tasks. One producer_task and three consumer_tasks. The producer_task starts by creating of two semaphores (xSemaphore_producer and xSemaphore_consumer). These semaphores control access to virtual item. The synchronization is based on bilateral rendezvous pattern. Both of consumer and producer must be prepared to enable transaction.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_sem.bin"  
run m7
```

Output

After the board is flashed the Tera Term will show debug console output.

```
Producer_task created.  
Consumer_task 0 created.  
Consumer_task 1 created.  
Consumer_task 2 created.  
Consumer number: 0  
Consumer 0 accepted item.  
Consumer number: 1  
Consumer number: 2  
Producer released item.  
Consumer 0 accepted item.  
Producer released item.  
Consumer 1 accepted item.  
Producer released item.  
Consumer 2 accepted item.  
. . .
```

8.6.9 freertos_swtimer

Description

This document explains the freertos_swtimer example. It shows usage of software timer and its callback.

The example application creates one software timer SwTimer. The timer's callback SwTimerCallback is periodically executed and text "Tick." is printed to terminal.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_swtimer.bin"
run m7
```

Output

After the board is flashed the Tera Term will show output message.

```
Tick.
Tick.
Tick.
. . .
```

8.6.10 freertos_tickless

Description

This document explains the freertos_tickless example. It shows how the CPU enters the sleep mode and then it is woken up either by expired time delay using low power timer module or by external interrupt caused by a user defined button.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_tickless.bin"  
run m7
```

Output

After the board is flashed the Tera Term will show debug console output.

```
0  
5000  
10000  
15000  
20000  
25000  
30000  
. . .
```

8.6.11 freertos_uart

Description

The UART example for FreeRTOS demonstrates the possibility to use the UART driver in the RTOS. The example uses single instance of UART IP and writes string into, then reads back chars. After every 4B received, these are sent back on UART.

Modifications made

None.

Changes needed

None

Execute binary

Run

```
setenv m7_file "freertos_uart.bin"
run m7
```

Output

You will see the welcome string printed out on the console. You can send characters to the console back and they will be printed out onto console in a group of 4 characters.

9 Appendix

List of Figures

<i>Figure 1: Register with F&S website</i>	4
<i>Figure 2: Unlock software with serial number</i>	5
<i>Figure 3: Device tree entry</i>	19

List of Tables

<i>Table 1: Content of the created release directory</i>	7
<i>Table 2: Description of the directory structure</i>	12

Third Party Agreement from Real Time Engineers Ltd.

Any FreeRTOS source code, whether modified or in its original release form, or whether in whole or in part, can only be distributed by you under the terms of version 2 of the GNU General Public License plus this exception. An independent module is a module which is not derived from or based on FreeRTOS.

Clause 1: Linking FreeRTOS with other modules is making a combined work based on FreeRTOS. Thus, the terms and conditions of the GNU General Public License V2 cover the whole combination.

As a special exception, the copyright holders of FreeRTOS give you permission to link FreeRTOS with independent modules to produce a statically linked executable, regardless of the license terms of these independent modules, and to copy and distribute the resulting executable under terms of your choice, provided that you also meet, for each linked independent module, the terms and conditions of the license of that module. An independent module is a module which is not derived from or based on FreeRTOS.

Clause 2: FreeRTOS may not be used for any competitive or comparative purpose, including the publication of any form of run time or compile time metric, without the express permission of Real Time Engineers Ltd. (this is the norm within the industry and is intended to ensure information accuracy).



Important Notice

The information in this publication has been carefully checked and is believed to be entirely accurate at the time of publication. F&S Elektronik Systeme assumes no responsibility, however, for possible errors or omissions, or for any consequences resulting from the use of the information contained in this documentation.

F&S Elektronik Systeme reserves the right to make changes in its products or product specifications or product documentation with the intent to improve function or design at any time and without notice and is not required to update this documentation to reflect such changes.

F&S Elektronik Systeme makes no warranty or guarantee regarding the suitability of its products for any particular purpose, nor does F&S Elektronik Systeme assume any liability arising out of the documentation or use of any product and specifically disclaims any and all liability, including without limitation any consequential or incidental damages.

Products are not designed, intended, or authorised for use as components in systems intended for applications intended to support or sustain life, or for any other application in which the failure of the product from F&S Elektronik Systeme could create a situation where personal injury or death may occur. Should the Buyer purchase or use a F&S Elektronik Systeme product for any such unintended or unauthorised application, the Buyer shall indemnify and hold F&S Elektronik Systeme and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, expenses, and reasonable attorney fees arising out of, either directly or indirectly, any claim of personal injury or death that may be associated with such unintended or unauthorised use, even if such claim alleges that F&S Elektronik Systeme was negligent regarding the design or manufacture of said product.

